



Waste Management Medical Waste Container Guidance Document

University of Missouri
Environmental Health
and Safety
573-882-3736
<http://ehs.missouri.edu/>
hazmat@missouri.edu



- 1 Open empty medical waste bin.



- 2 Line container with bag and place excess over sides of empty medical waste bin.



- 3 Close lid of empty medical waste bin to engage bag.



- 4 Begin filling (40 lbs. max weight), and affix completed Hazardous Material Label onto bag.



- 5 Secure bag by gathering and twisting the neck, then tie a single knot.





- 6 Leave bag in bin.



- 7 Close lid ensuring container locks located near the handles are secure.

Finally, all medical waste containers containing Pathological or Chemotherapy waste **MUST** have the applicable tag placed on them. These tags are supplied by your Waste Management Driver and/or EHS. Affix the hanging tag on the handle with the supplied wire.

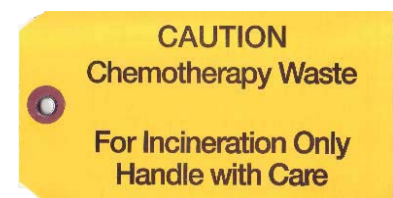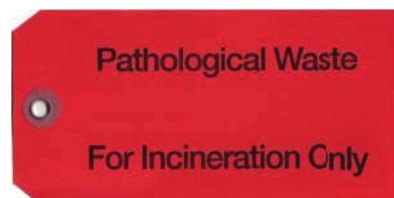

A video detailing these packaging instructions can be found at <http://ehs.missouri.edu/chem/medical-waste-container.wmv>
For additional information, please contact Environmental Health and Safety at: 882-3736 or hazmat@missouri.edu